


Link: <https://help.wextelematics.com/docs/aobrd-driver-reference/using-co-drivers/> Last Updated: January 29th, 2016

Co-driving allows multiple drivers to sign into the system. You can sign in up to six drivers at the same time.

1. From the Driver Overview screen, tap Driver


The Sign In screen appears.

1. Enter the additional driver's **Driver ID**, and tap **Sign In**.

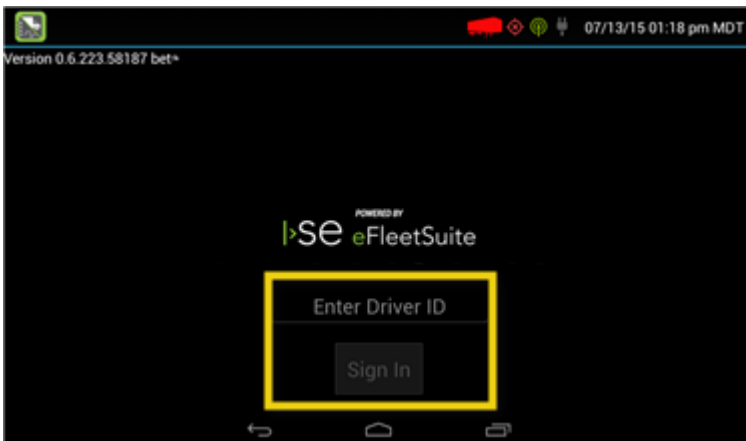

1. Set the additional driver's status. When another driver is already assigned to ON DUTY (Driver) status, the ON DUTY (Not a Driver) or SLEEPER statuses are available for the additional driver(s).

The names of the additional driver(s) are shown on the Driver Overview screen. You can tap a driver's name to view the overviews and log information for each driver.

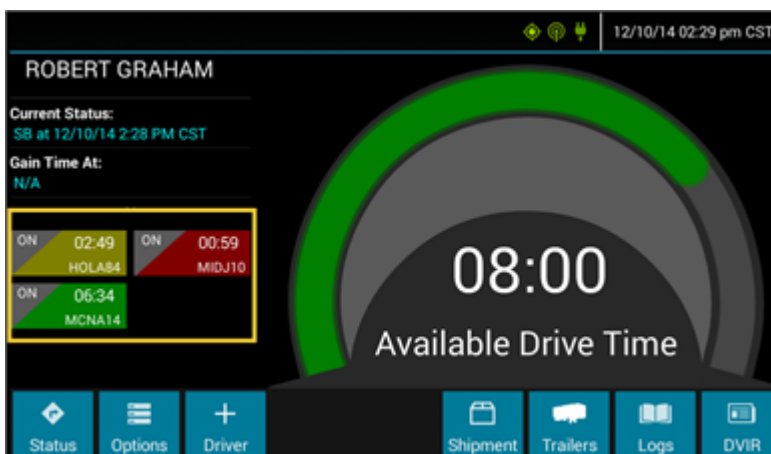

Note. The current driver must change his or her duty status to something other than DRIVER in order for any of the co-drivers to change their status to DRIVER.